

# TECHNICAL SPECIFICATIONS:

**Flysheet:** RIP-STOP PU polyester  
"UV Resistant" (3000 mm H<sub>2</sub>O)

**Sleeping area:** polyamide

**Floor:** PE fabric (10,000 mm H<sub>2</sub>O)

**Frame:** aluminium 7001 T6 fi 9.5 mm


**Seams:** all taped

**Tent capacity:** 3 persons

**Weight:** 4,4 kg

[dimensions: 345 x 22 x 160 cm]

**GUARANTEE: 3 YEARS**

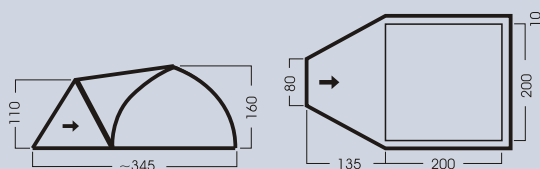



**Made in Poland**

# SETTING UP THE TENT

- Spread out the tent on the ground, not necessarily in the place where you want to set it. Do not fix it with pins to the ground! Fasten the zippers.
- Insert assembled frame poles into the sleeves of the flysheet (Fig. 1). Insert the shorter frame pole into the sleeve of the dome.
- Slide the tube that ends the upper frame pole onto the pin, which is located on the ring in the corner of the floor (Detail A). Bend the upper pole to mount its other end in the opposite corner. Similarly mount the other frame poles.
- Use the free end of the tensioning tape near the snap buckles to adjust the tension of the flysheet (Fig. 2 - arrow).
- After assembling the tent, set it in the desired location. Stretch the floor and attach it with the pins in the corners, then stabilize the tent using guy lines. Put the roof cover on and stabilize the tent with guy lines.

## COMPONENTS:

flysheet and sleeping area (integrated)  
frame (3 frame pole)  
aluminium pins (7)  
guy lines (3)  
bag  
manual,  
guarantee

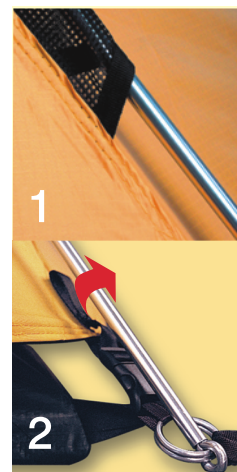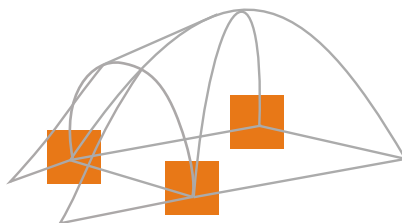

Marabut  
Sp z o.o.

32-070 Czernichów 451  
tel: (12) 270 24 24  
fax: (12) 270 24 40

e-mail: [namioty@marabut.pl](mailto:namioty@marabut.pl)  
[www.namioty.marabut.com](http://www.namioty.marabut.com)

**A**